



REAR DOOR ROLLER CURTAIN

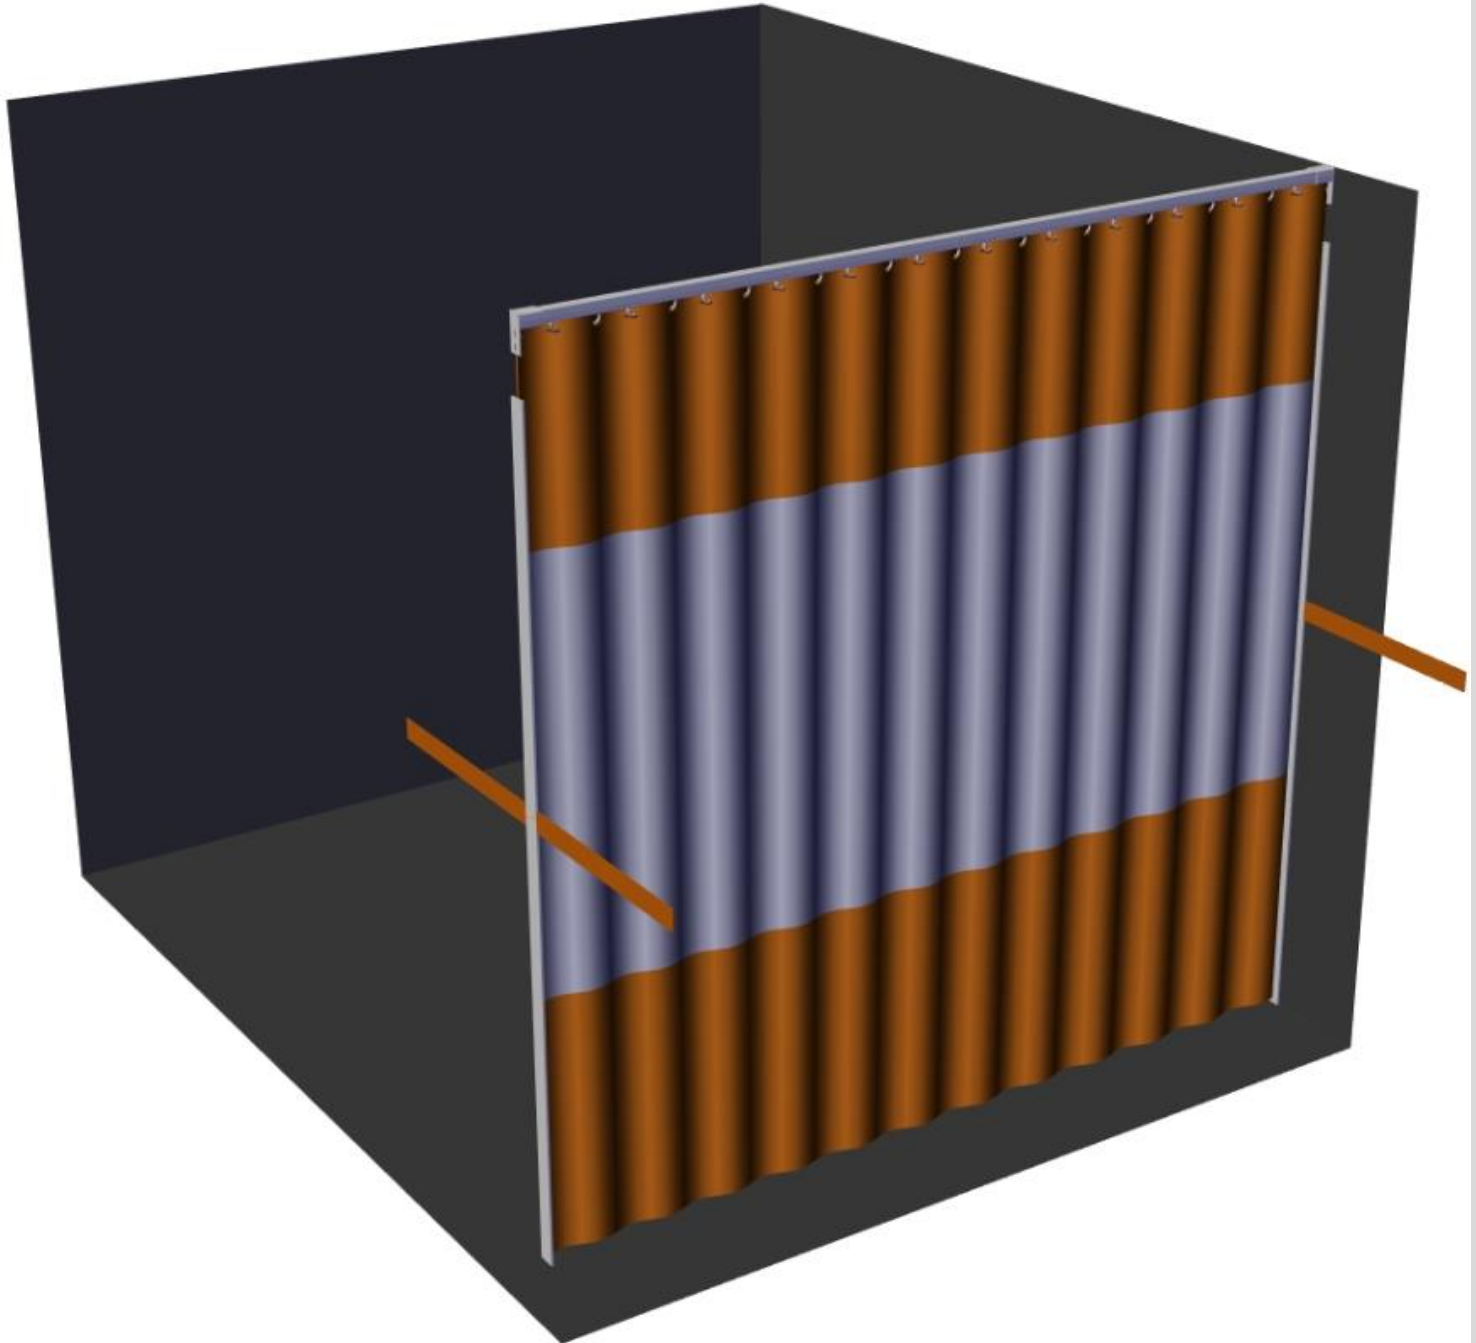

Installation Instructions


Note: **Vehicle** Mounting fasteners not included in the kit due to variations in Construction.

Installation Instructions

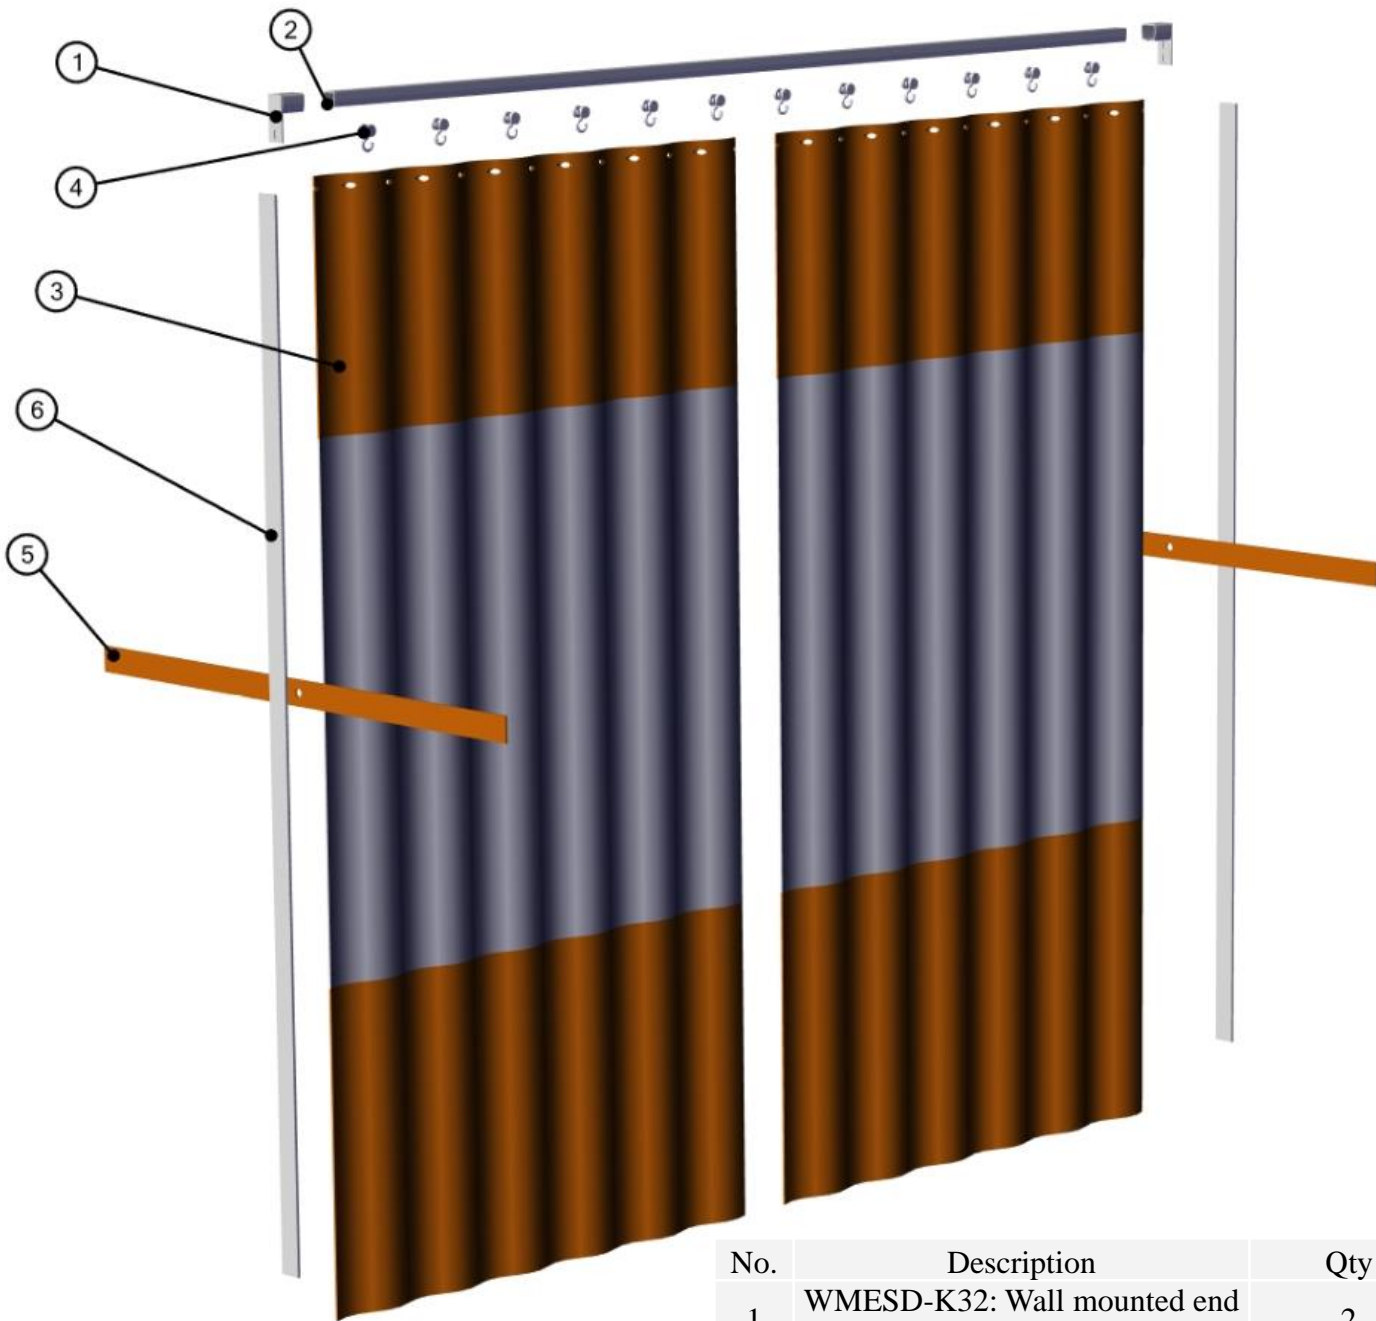


No.	Description	Qty
1	WMESD-K32: Wall mounted end stop	2
	Set screws	4
2	TR-K 15 (CUT TO LENGTH)	1
3	CURTAIN	2
4	NY-K42 ROLLER HOOK	Width Specific
5	TIE BACK VELCRO	2
6	SIDE WALL VELCRO	2

Note: Vehicle Mounting fasteners not included in the kit due to variations in Construction.

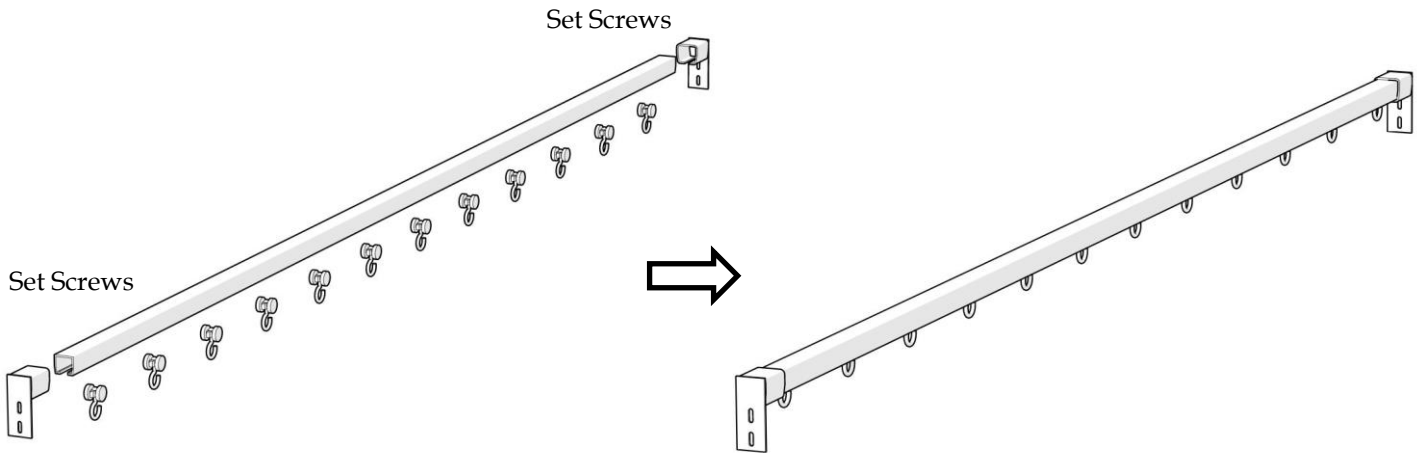

- Slide one mounting bracket on one end of the bar.
- Slide the roller hooks into the track followed by sliding-on the second mounting bracket.
- Attach brackets to the side walls at the desired location.
 - Brackets should be attached to some type of reinforcement in the side walls.

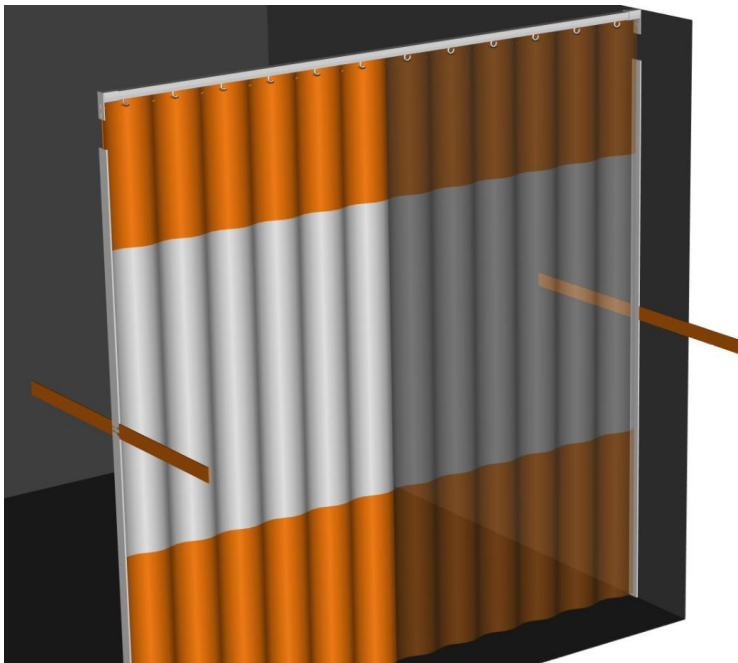

- Attach the curtains to the 1" hooks.
- Attach the Velcro to the side walls.
- Attach the tie back straps by fastening it through the grommet.
 - Standard placement is 36" up from the floor centered in the width of the Velcro.