



SIDE DOOR STRIP CURTAIN

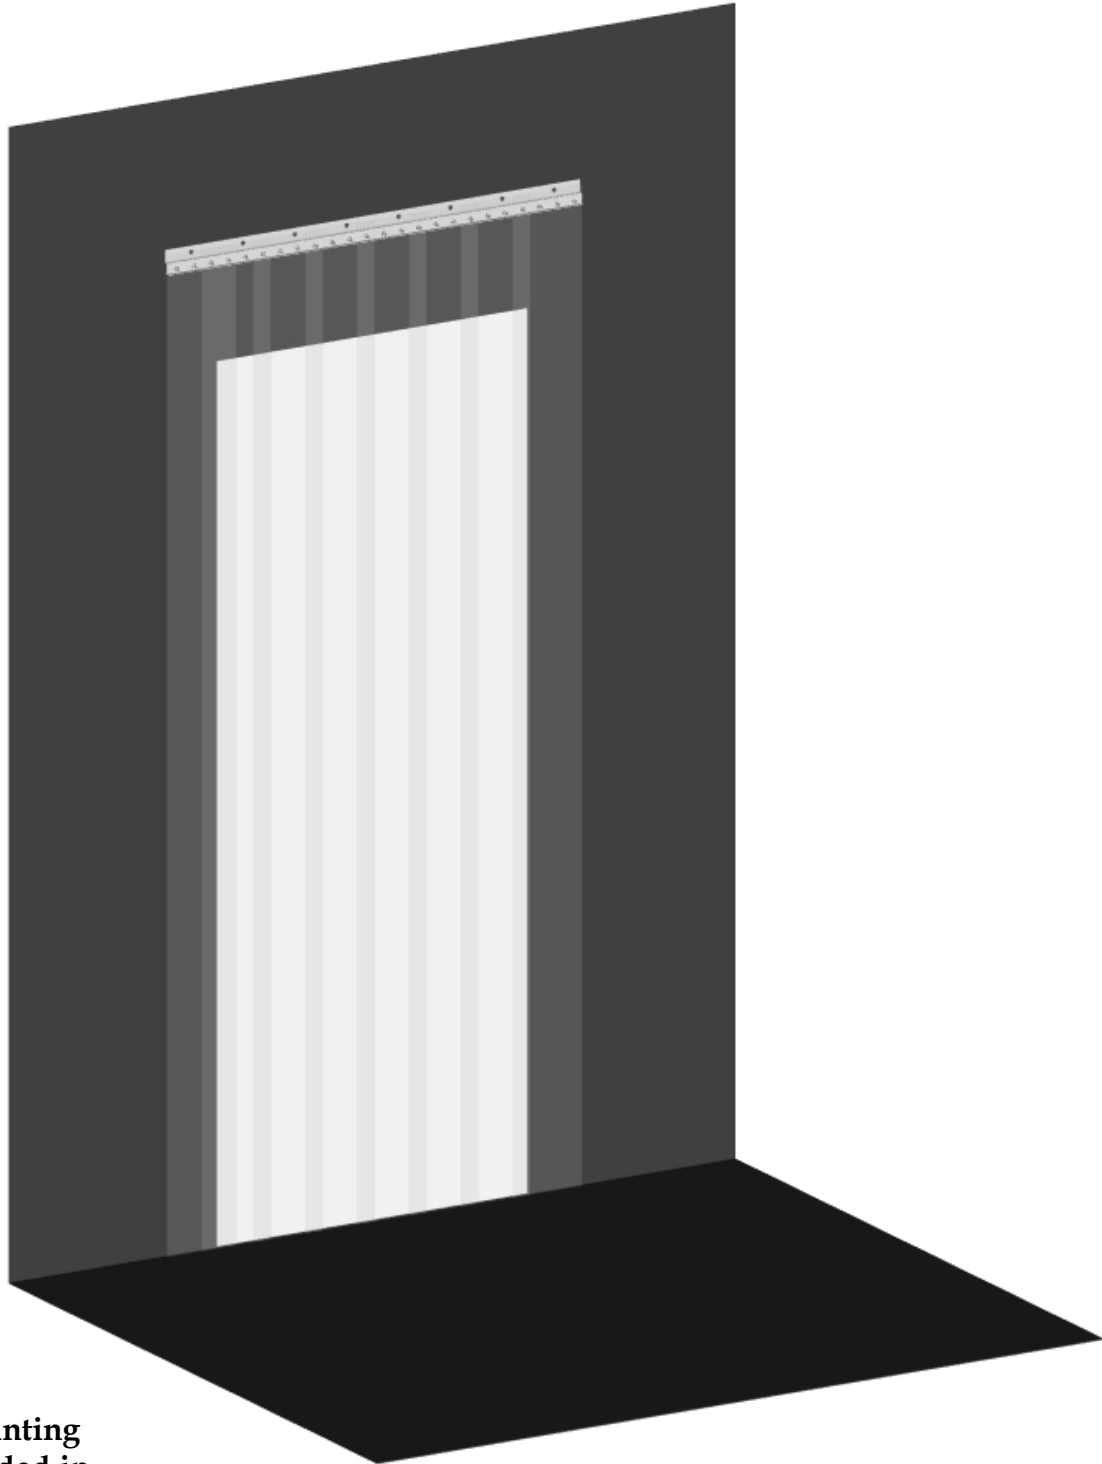

Installation Instructions


Note: **Vehicle** Mounting fasteners not included in the kit due to variations in Construction.

Installation Instructions

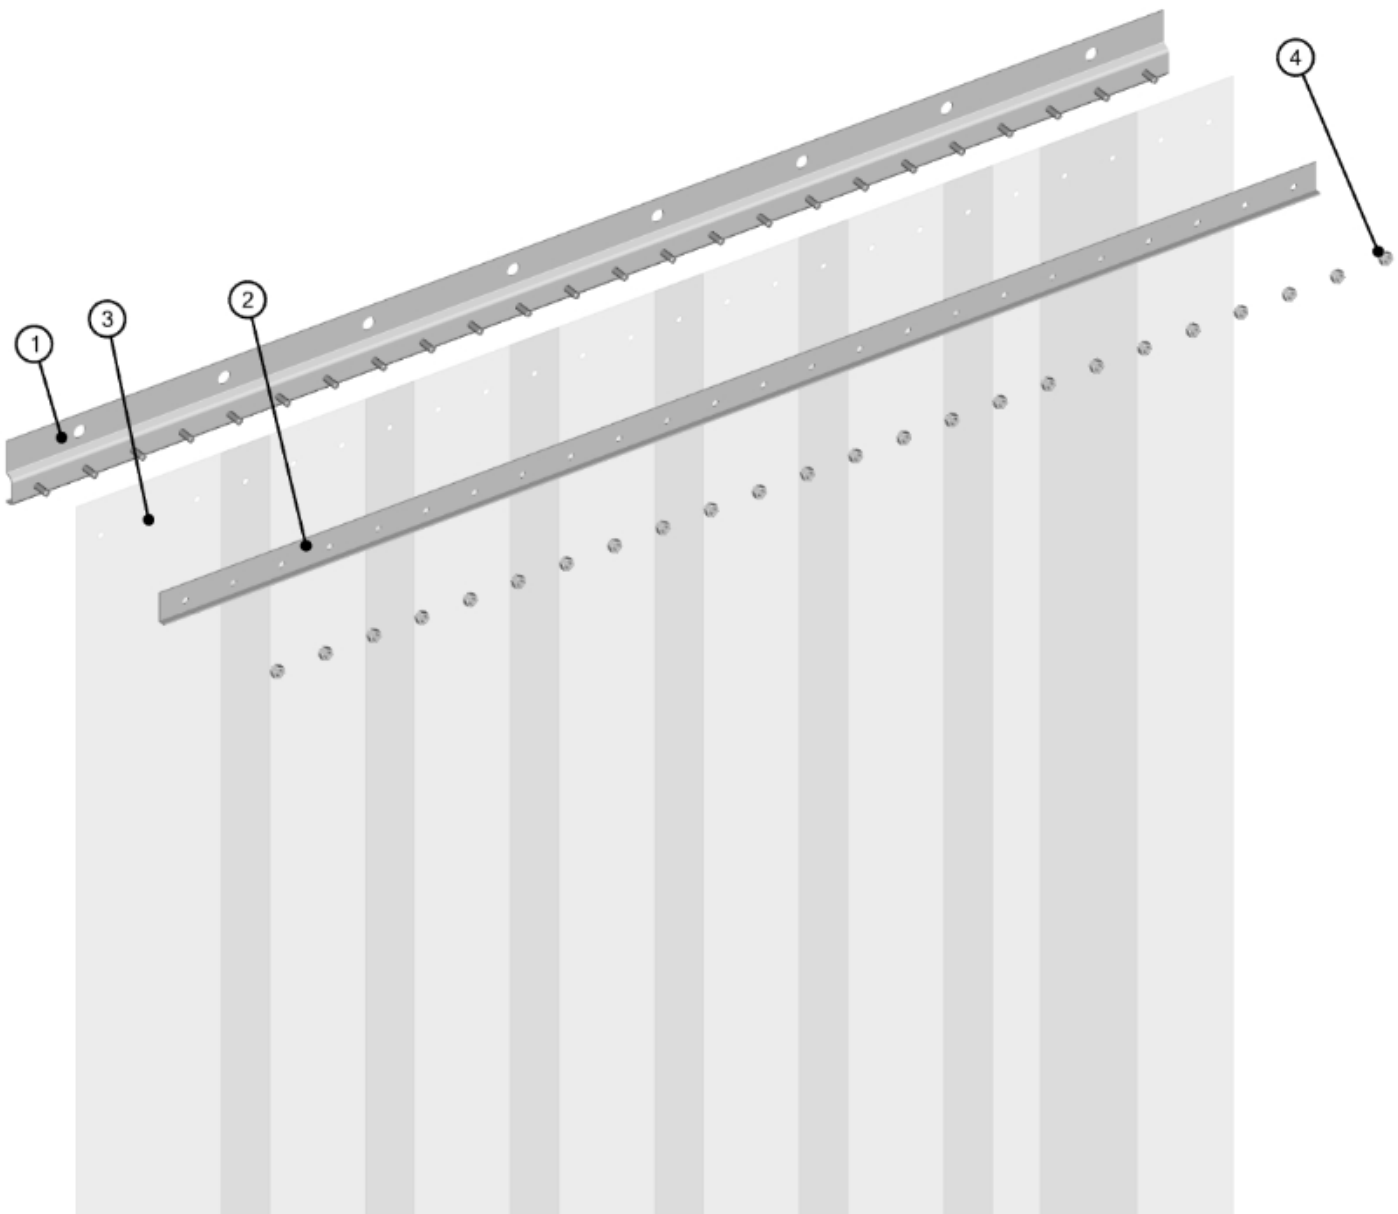


No.	Description	Qty
1	WMB: Wall Mount Bracket	1 – Cut to Size
2	WMB RETAINING BAR (12"W)	Width Specific
3	8" STRIP CURTAIN	Width Specific
4	Retaining Nut (6ea. Per retaining bar)	Width Specific

Note: Vehicle Mounting fasteners not included in the kit due to variations in Construction.

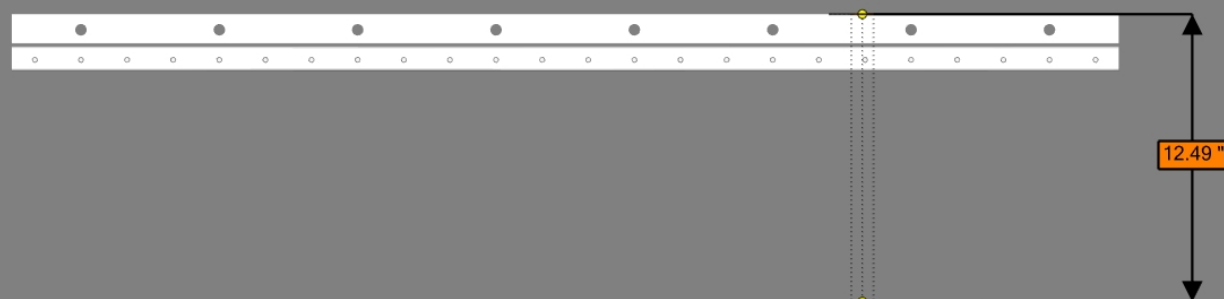

- **The mounting bracket shall be centrally aligned with the trailer side door opening. Fasten the mounting bracket 12.5” from the top of the door and test the length of the strips provided, to see if they touch the floor.**
- **Suitable fasteners (not provided) shall be used depending on the vehicle and reinforcements available.**

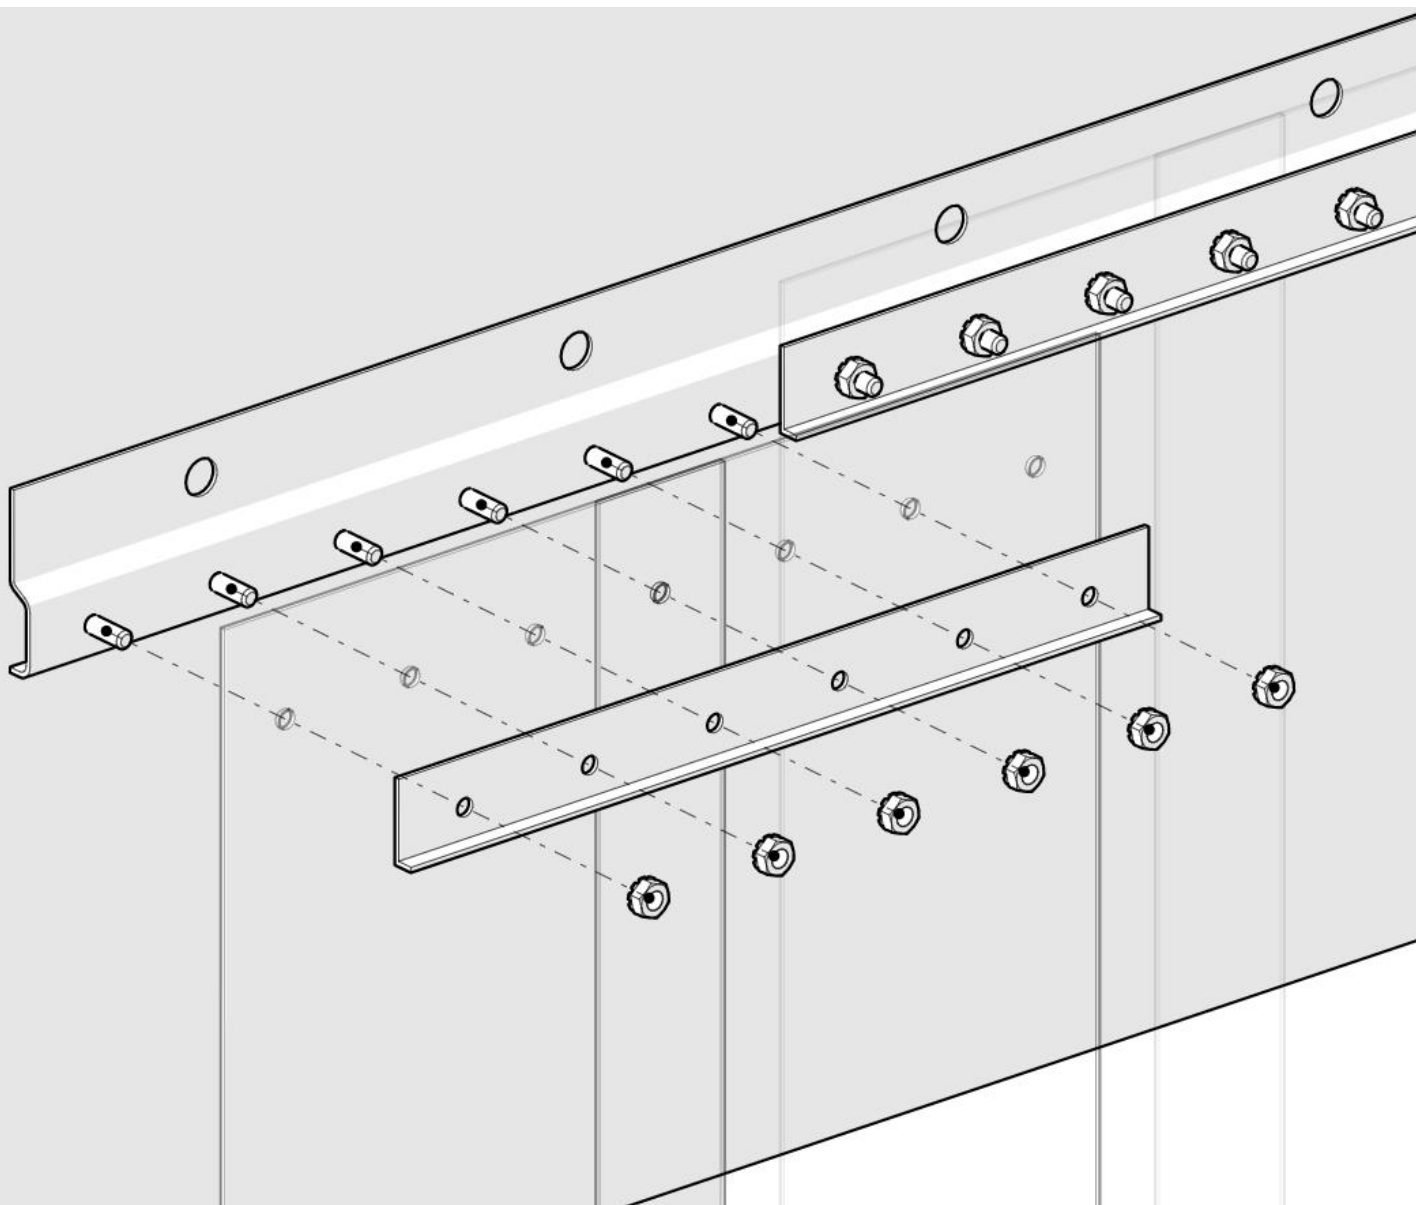

- **Hang the strip curtains on the studs available on the mounting bracket. Start from the left keeping a **2" (25%)** overlap as shown in the image.**
- **Lock the curtains in position using the retaining brackets, making sure the bent edge is facing away from the curtain, and the lock nuts provided; as shown in the image.**